



1-800-241-2771


Gooseneck

Operation

The gooseneck is attached to the pump and is used to fill the automatic taper. Place a pump gasket on the pump housing, over the protruding studs. Then, set the gooseneck over the studs and tighten the hex nuts firmly to prevent leakage.

Maintenance

Remove the gooseneck from the pump and clean thoroughly with a brush and water (or a water hose) to remove all joint compound from the tool. Then, after the tool is clean, lightly oil with Ames® Bazooka® Oil or any light machine oil.

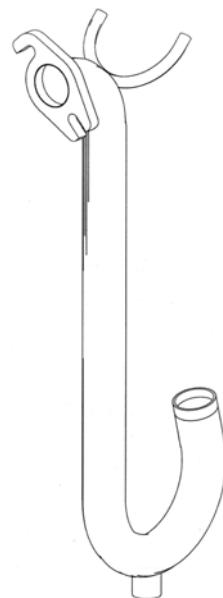

Gooseneck



1-800-241-2771


Cuello de Ganzo

Funcionamiento

El cuello de ganzo se halla unido a la bomba EasyClean® y se usa para llenar el encintador automático. Coloque la junta de la bomba en su alojamiento, encima de las tachuelas sobresalientes. A continuación, ponga el cuello de ganzo sobre las tachuelas y apriete firmemente las tuercas hexagonales para prevenir filtraciones.

Mantenimiento

Extraiga el cuello de ganzo de la bomba EasyClean® y límpielo a fondo con agua y una brocha (o una manguera) para eliminar de la herramienta todos los restos de compuesto. Despues de limpiarla, engrásela con aceite de Bazooka®

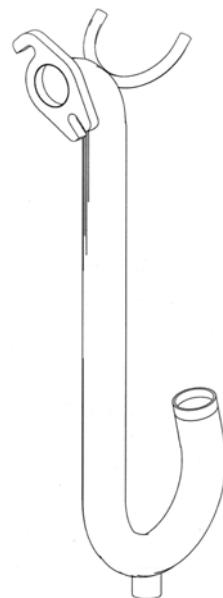

Cuello de Ganzo